

# TUNING CARD

## PLAYING THE MUSIC MAKER:

Slide a songsheet under the strings and pluck the string above each note on the songsheet. Follow the notes in a "connect the dots" fashion.

## PLEASE NOTE:

The adjustments needed to tune the Music Maker are very small. If you overtighten the strings, they can break. So go slow, go easy. Also, be sure the tuner fits all the way down on the tuning pin. This will prevent the tuner from stripping out.

## TUNING YOUR MUSIC MAKER:

Your Music maker was tuned at the factory, and checked again at our offices. It was thus in tune when it left our offices. Unfortunately, we cannot control what happens afterward, as the box may be roughly treated during shipment, at the store, or any time afterward.

Most Music Makers arrive in excellent tune, but some may come slightly out of tune because of this. Please also keep in mind that, as a real musical instrument, your Music Maker will need periodic tuning adjustment.

You do not need a piano to tune your Music Maker. To check the tuning, play a song you know well. You'll know right away if it is not properly tuned. Identify the offending string and adjust the tuning. If you are not musical, we suggest having someone else tune it for you (a friend, music student, or a music store).

If you have any questions, please call us at 800-779-2205. We're there to help. Most questions can typically be answered by consulting our web site ([www.europeanexpressions.com](http://www.europeanexpressions.com)).

G (do)

F# (ti)

E (la)

D (so)

C (fa)

B (mi)

A (re)

G (do)

F# (ti)

E (la)

D (so)

C (fa)

B (mi)

A (re)

G (do)